MINI MATTE BOX - 安装说明书 - INSTALLATION MANUAL

1.Install the inner lens ring – 安装镜头内环

- 选择镜头对应尺寸的镜头内环，旋转安装到镜头上。①
- Select the lens inner ring that matches the lens size and screw it onto the lens.①

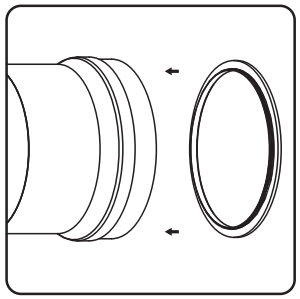

①

2.Install the mini matte box – 安装遮光罩

- 将遮光罩水平倒放在桌面上，随后将镜头内环放置到遮光罩的镜头支架的内嵌槽内，②调整水平后再安装螺丝，环绕安装8颗螺丝以固定镜头内环和镜头支架。③
- Place the lens hood upside down on the table, then insert the lens inner ring into the recessed slot of the lens mount.② Adjust the position horizontally, then secure with 8 screws to fix the lens inner ring and lens mount.③

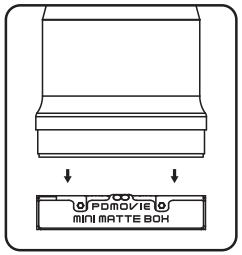

②

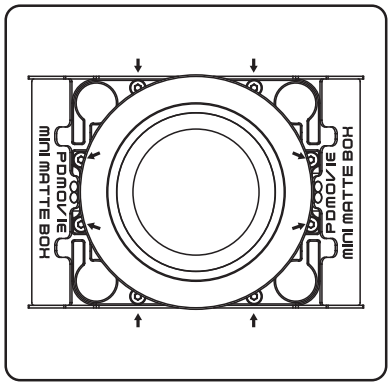

③

3. Install the fender – 安装叶子板

- 将叶子板的螺丝，对应安装在遮光罩上的1/4螺孔中。
- Install the fender screws into the corresponding 1/4 screw holes on the lens hood. ④

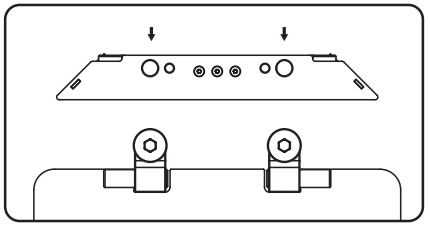

④

4. Install the filter – 安装滤镜

- 将配备的滤镜旋转安装到遮光罩正面。也可自行替换直径为72mm的其他圆形滤镜。⑤
- Rotate and install the provided filter onto the front of the lens hood. You may also replace it with any other 72mm circular filter. ⑤

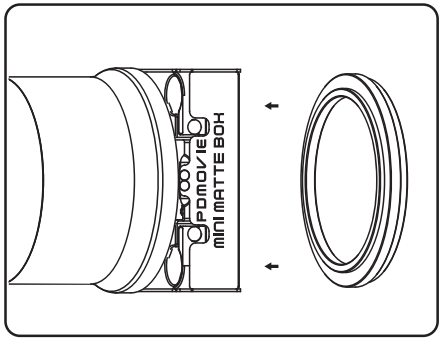

⑤

5. Install the LiDAR auto-focus motor – 安装LiDAR自动跟焦马达

- 如需安装LiDAR自动跟焦马达，需要先将遮光罩的侧板拆除，⑥然后将导管安装到适合的导管孔中，最后安装LiDAR自动跟焦马达，锁紧即可。⑦
- To install the LiDAR auto-focus motor, first remove the side panel of the lens hood.⑥ Then, insert the conduit into the appropriate hole and attach the LiDAR motor. Tighten to secure.⑦

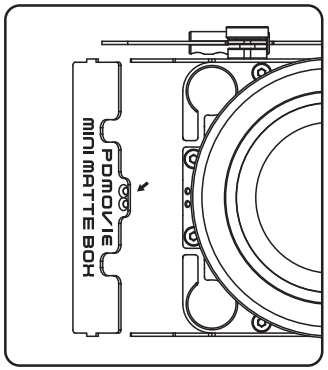

⑥

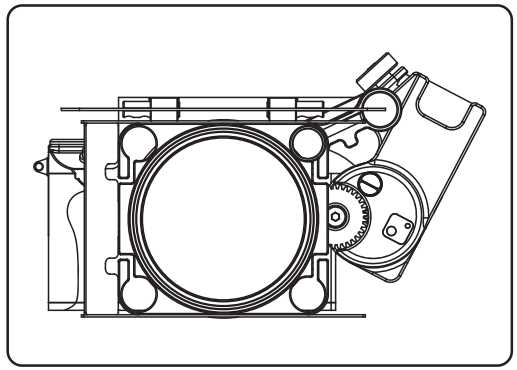

⑦